


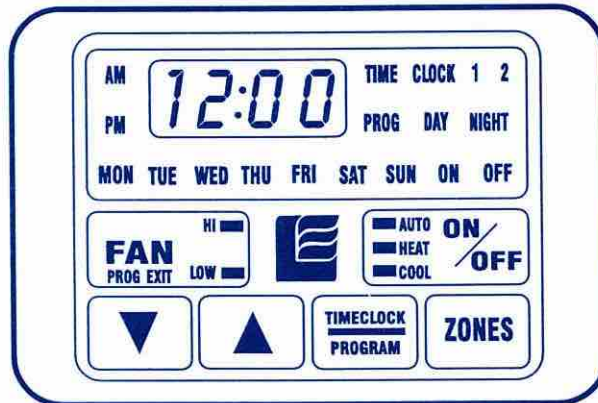

# LE-501CW

## Operating Instructions



Proudly Australian Made



# LE-501CW


Page

## Basic Operation

1.	To turn On/Off	1
2.	Fan Control	1
3.	Adjust Temperature	2
4.	Extended Display	2

## Programming Instructions

5.	Quick Tips for Programming	3
5a.	Programming the Timeclock	4
6.	Setpoint Range Limit Program	5
7.	Zone Control	5

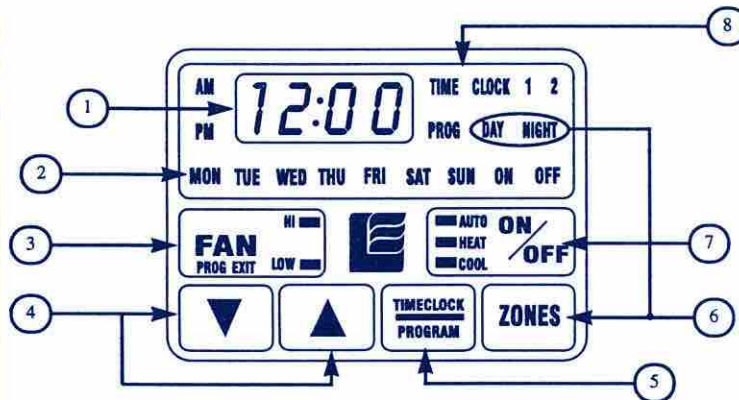


- |   |                     |
|---|---------------------|
| 1. Display:<br>Clock/Setpoint/Room Temp | 5. Program Button   |
| 2. Day of the Week                      | 6. Zones            |
| 3. Fan Control                          | 7. Turn On/Off      |
| 4. Adjust Settings                      | 8. Timeclock Active |

**1. To Turn On/Off**




**2a. Fan Control - With System ON**

Note: Some features listed here may not be available due to specific configuration to suit your application. (LE-501 only)

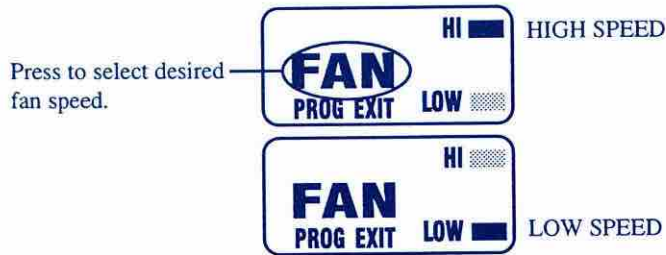


**2b. Fan Control - With System OFF**

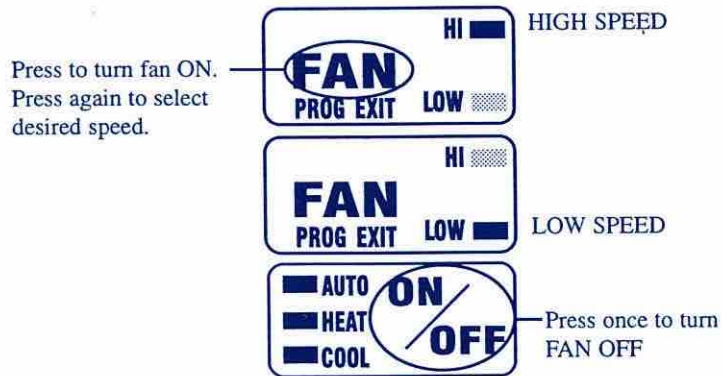

Note: Low speed may not be available on some models.

### 3. Adjust Temperature

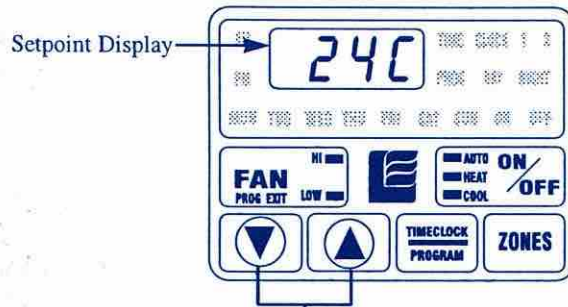


Press and hold either arrow key until desired temperature is reached

### 4. Extended Display

One Short Press  for REAL TIME CLOCK display.

REAL TIME CLOCK is displayed for five seconds.

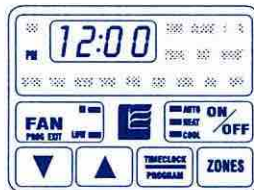

Then ROOM TEMPERATURE is displayed for 5 seconds.



Note: If the clock appears to lose time you may have lost power for a short time. On loss of power, the control will remember the current time and start counting again when power is reinstated.

The extended display gives the opportunity to view the REAL TIME and the ROOM TEMPERATURE.

These displays are also the ENTRY POINT for programming options as described in the next section.

## 5. Programming the Timeclock


This control has a REAL TIME clock and gives you the option to program TWO automatic operation periods per day.

### Quick Tips for Programming.


To exit program at anytime press 


From Tuesday onwards at ANY PROG-1 ON, the previous days settings can be DUPLICATED.


To duplicate the previous days' settings:

Press  and the previous days settings will be accepted and will move you to the following day.

To Delete a Program:

Press  at any PROG ON time.

If program previously deleted, and is to be re-instated, press  at ANY Prog ON time.

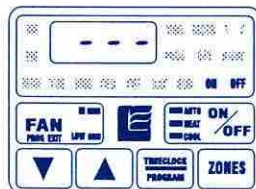

Indicates deleted program.

To enter TIMECLOCK program:

Press  when  (clock) is displayed press  again.






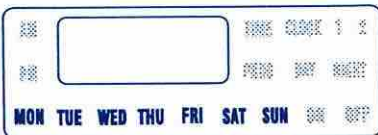




### 5. Programming the Timeclock (cont)



Note: Use  or  to adjust all settings from now on.



#### Screen Display



Press  to set correct TIME. 

Press  to set correct DAY. 

Press  to select time for  
PROG 1 ON 



Press  to select time for  
PROG 1 OFF 

Press  to select time for  
PROG 2 ON 

Press  to select time for  
PROG 2 OFF  
TUESDAY 

Indicates next day off \_\_\_\_\_

Note: Prog 2 time off can be set up to 6.00AM the NEXT DAY

Press  to select time for  
PROG 1 ON  
TUESDAY 

Continue above procedure to set time for the entire week.

## 6. Setpoint Range Limit


This program allows you to LIMIT the adjustment range of the SETPOINT temperature from the current setting. If the upper and lower limits are set to the same temperature, no adjustment is possible from the keypad.

The normal adjustment range is 18°C to 30°C.

This program also allows extended adjustment from 15°C to 33°C.

Press **TIMECLOCK PROGRAM** then **▼** and **▲**

Adjust for the Lowest required temperature setting.

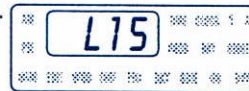


Press **TIMECLOCK PROGRAM** and adjust for the Highest required temperature setting.



Press **TIMECLOCK PROGRAM** to EXIT.

## 7. Zone Control

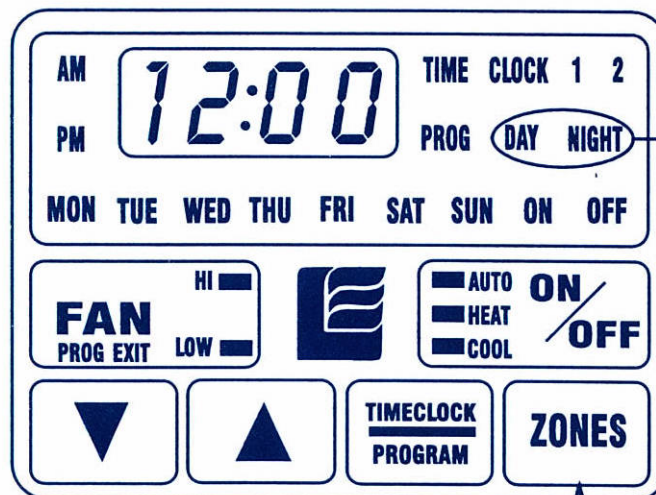

Press to change from DAY to NIGHT.